

Dear Sir/ Madam,

Thank you for your purchase of this system from [www.spycameracctv.com](http://www.spycameracctv.com) when you receive the item please check the contents of the box and read through the following steps, the set-up should go without a hitch. Please note this software will only work with XP.

### **Installation Instructions**

1. Plug the power adapter for the camera into the wall and turn on. Turn off any Anti-virus software on the PC as this may interfere with the installation, you can turn it back on after the software is installed.
  2. Go to <http://pdfs.opentwentyfourseven.co.uk/usbnc01-drivers-software.zip>. Click on save as and download you your desktop
  3. Open and extract the zip file to a new folder (if you can't open the file you may need to download Winrar or Winzip which is a free download).
  4. Plug the receiver in and when prompted by windows, follow the prompts and select the 'Drivers folder' you have just created. This will then install the driver for both the audio and the video.
- N.B You may need to do this process twice, once for the video and once for the Audio. Please wait as this can take a few minutes
5. Run the setup file, and click continue anyway if prompted in order to install WX Digital..
  6. Restart the PC once all drivers and software has been installed.
  7. Start the WX Digital Programme and click the settings icon on the control panel (it looks like a spanner) Select the USB video and Audio inputs which were just installed.
  8. Twist the tuning knob on the receiver around until you get a picture and the hissing stops. If your PC is too near to the camera you may also get some feedback from the PC speakers.

### **Useful Tips**

- We have found it is best to tune in the receiver while the camera is pointing to a light source.
- If using the battery option, please use a good battery like Duracell as some of the cheaper ones will only last for a short time and may not even give you a good picture.
- Restart your PC after the installation has finished, as the changes do not always take effect straight away.
- If you are not getting a picture please check your drivers are installed correctly, to do this; click on start > right click my computer > properties > and then the hardware tab. Select device manager and make sure there are no crosses or question marks. If there are then you will need to update the driver.
- If you are using the camera on a PC and want some more advanced features we suggest you use Active Webcam. This can be downloaded for free from [www.download.com](http://www.download.com) but unfortunately, we cannot provide support for this 3<sup>rd</sup> party software.
- **Metal cased camera's only:** If you have a blurry picture then you will have to adjust the focus. This can be done by twisting the lens in and out of the casing until you have a crisp image.
- If you have any questions or problems please do not hesitate to contact us 9am – 5pm on 0845 4560203.